

Operation of auto-starting guardian APK

How to operate the daemon:


1. Open folder




2. Copy the APK to a USB drive

3. Power on the motherboard, plug in the USB drive, and locate the APK file within it under File Management.

4. Open the APK. As shown in the image

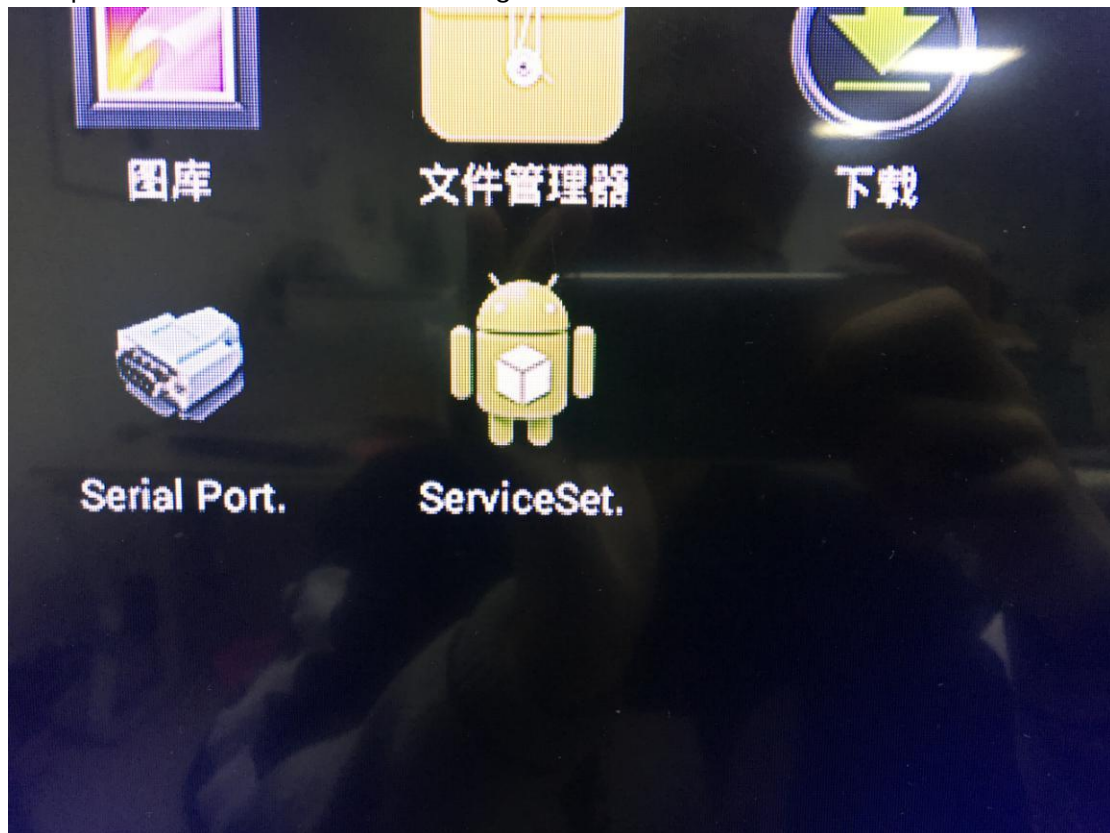


5. After entering the program, perform the operation.

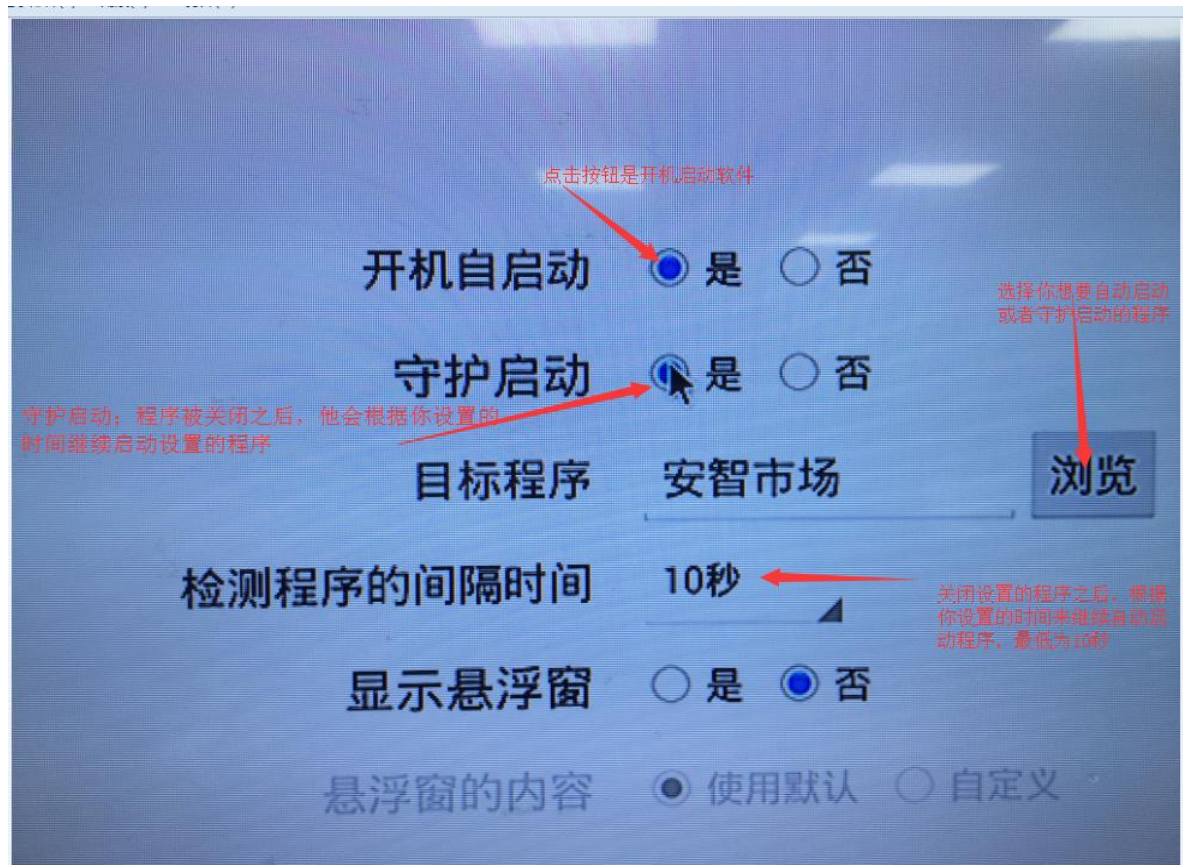


Note: The interval time for detection programs should be set to a longer duration, preferably exceeding 1 minute. If the interval is set too short, the software may require firmware flashing if there is insufficient time for operations after exiting in later stages. This must be particularly noted.

检测程序的间隔时间

5. Settings for displaying floating windows
6. The recommended protection duration is 40 seconds. Setting it too short may prevent cancellation later, forcing you to flash the firmware.

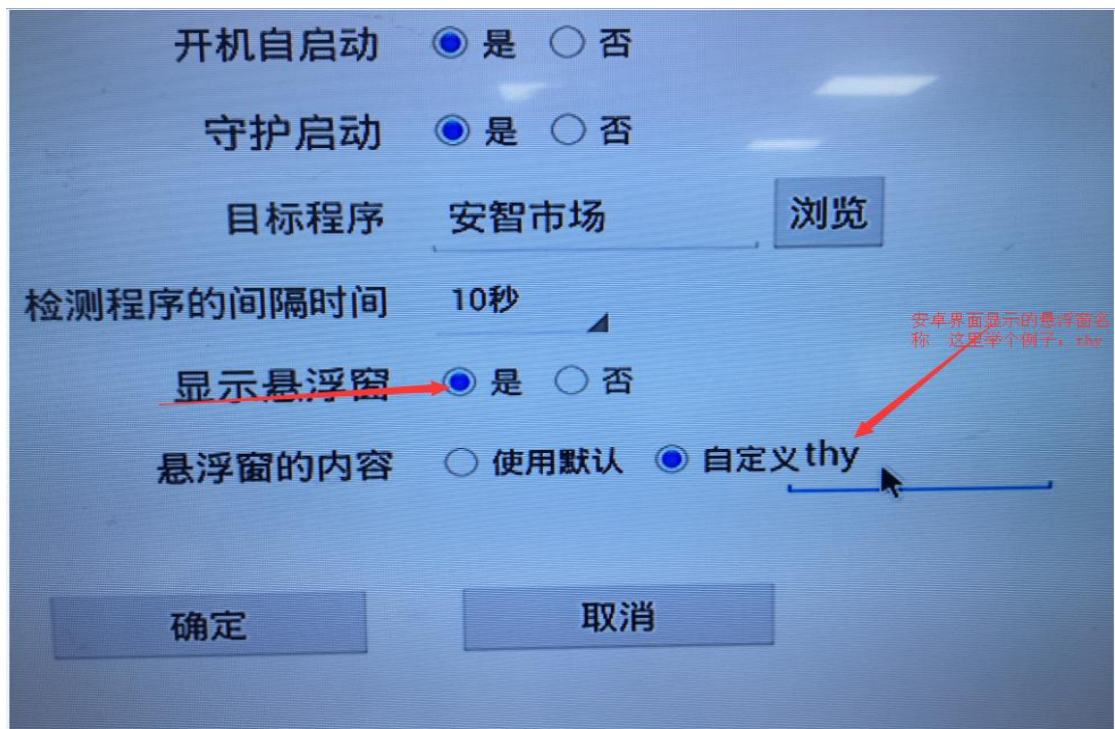

After configuration, your custom name will appear on the interface. Clicking it will launch the configured auto-start software.

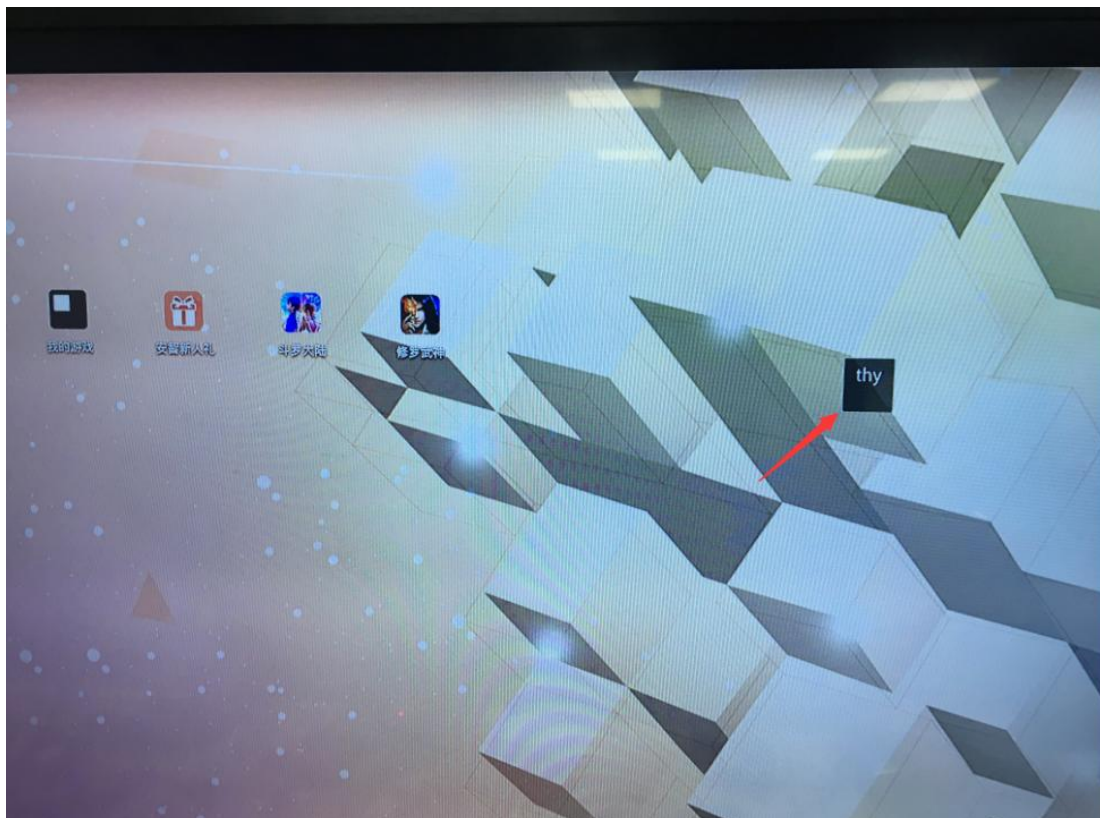

7, unload .

If you no longer need this feature and want to uninstall the software, you must remove the setting and server APKs. Important: